



*All Pictures above are for illustration purpose only. Actual product appearance may vary.

Features

- 100% OEM (same product supplied to original vehicle)
- Products developed strictly following the OEM criteria
- High reliability of long-year experience as OEM manufacturer

Parts/Vehicle Information

Genuine Part No.	JTEKT Part No.	Part	Vehicle Model	Vehicle Model code
------------------	----------------	------	---------------	--------------------

Production : Japan

42330-22091	JC030-001240	SHAFT ASSY, RR DRIVE	IS, MARK X	GSE20, GRX120
42340-22181	JC040-000470	SHAFT ASSY, RR DRIVE	IS, MARK X	GSE20, GRX120
43430-60040	JC010-002040	SHAFT ASSY, FR DRIVE	LAND CRUISER80/100(1998-2007), LX470	UZJ100W, HDJ100W
43430-60083	JC010-002051	SHAFT ASSY, FR DRIVE	PRADO(2009-), FJ CRUISER, GX	GRJ150W, GDJ150W, TJD150W, GSJ15W, UZJ120
04427-60142	JC091-006260	BOOT KIT, FR DRIVE	HILUX, PRADO(2002-2009), FJ CRUISER, GX	GRJ120, KDJ120, RZJ120, TRJ120, VZJ120, GSJ15W, UZJ120

Genuine Part No.	JTEKT Part No.	Part	Vehicle Model	Vehicle Model code
------------------	----------------	------	---------------	--------------------

Production : Thailand

43420-0D560	JC020-001390-A	SHAFT ASSY, FR DRIVE, LH	YARIS/VIOS (2013-) 1.5L CVT	NSP151, NCP150
43420-0D280	JC020-001400-A	SHAFT ASSY, FR DRIVE, LH	YARIS/VIOS (2013-) 1.3L CVT/MT, 1.5L MT	NSP151, NCP150
43410-0D700	JC010-001970-A	SHAFT ASSY, FR DRIVE, RH	YARIS/VIOS (2017-)	NSP151
43410-0D260	JC010-001980-A	SHAFT ASSY, FR DRIVE, RH	YARIS/VIOS (2013-2017) 1.3L MT, 1.5L CVT/MT	NCP150
43410-0D570	JC010-001990-A	SHAFT ASSY, FR DRIVE, RH	YARIS/VIOS (2013-2017) 1.3L CVT	NCP150
-	JC091-006040-A	BOOT KIT, CV JOINT IN	YARIS/VIOS (2013-)	NCP150, NSP151
-	JC091-006050-A	BOOT KIT, CV JOINT OUT	YARIS/VIOS (2013-)	NSP150, NSP151
43405-0D310	JC003-003000-A	JOINT SUB-ASSY, CV JOINT	YARIS/VIOS (2013-)	NSP150, NSP151
43410-02C60	JC010-001510-A	SHAFT ASSY, FR DRIVE, RH	COROLLA ALTIS	E210
43410-02C71	JC010-001521-A	SHAFT ASSY, FR DRIVE, RH	COROLLA ALTIS	E210
43420-02F60	JC020-001070-A	SHAFT ASSY, FR DRIVE, LH	COROLLA ALTIS	E210
43420-02F70	JC020-001080-A	SHAFT ASSY, FR DRIVE, LH	COROLLA ALTIS	E210
43410-0A070	JC010-001580	SHAFT ASSY, FR DRIVE, RH	COROLLA CROSS	ZVG10
43410-0A080	JC010-001590	SHAFT ASSY, FR DRIVE, RH	COROLLA CROSS	ZVG10
43420-0A070	JC020-001120	SHAFT ASSY, FR DRIVE, LH	COROLLA CROSS	ZVG10
43420-0A080	JC020-001130	SHAFT ASSY, FR DRIVE, LH	COROLLA CROSS	ZVG10
04437-0D390	JC091-005690-A	BOOT KIT, FR DRIVE SHAFT IN, JT, RH	COROLLA ALTIS, COROLLA CROSS	E210, ZVG10
04428-0D541	JC091-005680-A	BOOT KIT, FR DRIVE SHAFT IN & OUT JT, LH	COROLLA ALTIS, COROLLA CROSS	E210, ZVG10
04428-0D540/542	JC091-005681	BOOT KIT, FR DRIVE SHAFT IN & OUT JT, LH	COROLLA ALTIS, COROLLA CROSS	E210, ZVG10
04428-0D402	JC091-004671	BOOT KIT, FR DRIVE SHAFT IN & OUT JT, LH	COROLLA ALTIS, COROLLA CROSS	E210, ZVG10
04428-0D392	JC091-004651	BOOT KIT, FR DRIVE SHAFT IN & OUT JT, LH	COROLLA ALTIS, COROLLA CROSS	E210, ZVG10
04427-0D422	JC091-004661	BOOT KIT, FR DRIVE SHAFT IN & OUT JT, RH	COROLLA ALTIS, COROLLA CROSS	E210, ZVG10
04427-0D560/562	JC091-005671	BOOT KIT, FR DRIVE SHAFT IN & OUT JT, RH	COROLLA ALTIS, COROLLA CROSS	E210, ZVG10
04427-0D561	JC091-005670-A	BOOT KIT, FR DRIVE SHAFT IN & OUT JT, RH	COROLLA ALTIS, COROLLA CROSS	E210, ZVG10
04427-0D412	JC091-004641	BOOT KIT, FR DRIVE SHAFT IN & OUT JT, RH	COROLLA ALTIS, COROLLA CROSS	E210, ZVG10



Website


CAT.NO.AM0003_EN-2

STOP Using Imitations!

JTEKT

Product structure comparison

JTEKT

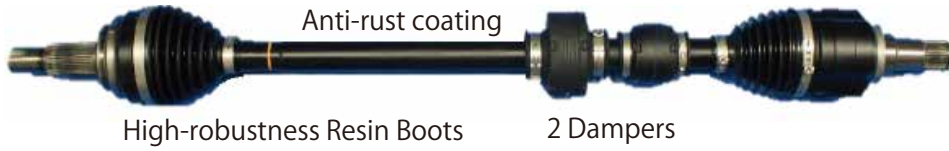

Anti-rust coating
High-robustness Resin Boots
2 Dampers to absorb the impact enough

Imitation




No coating




No coating = Easily getting rusty
Normal rubber boots = Easy to be broken
1 Damper = Not enough to absorb to impact

Strength Test

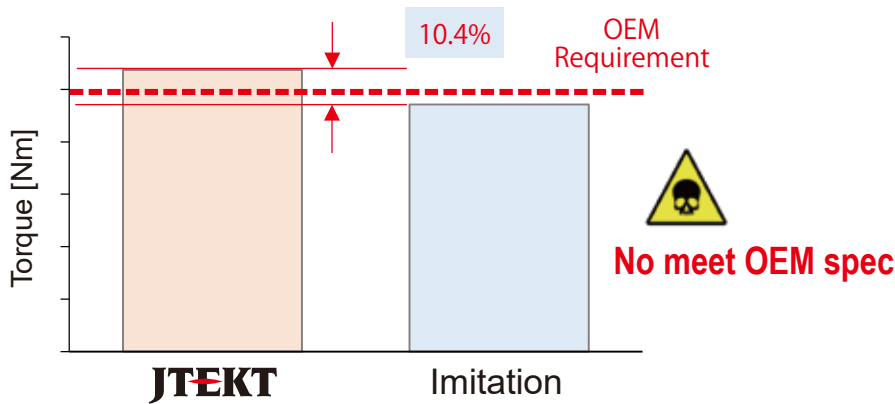

10.4% Lower Strength than JTEKT

Durability Test

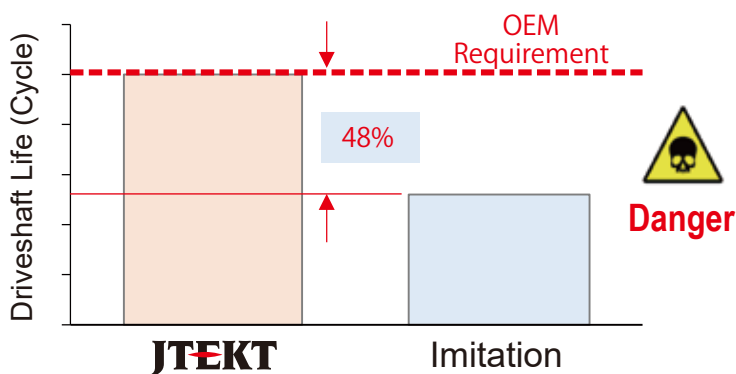

48% Lower Durability than JTEKT



This is why OEM product matters for safe drive

CAT.NO.AM0003_EN-1